# **Plan Reports**

The ElectronRT App allows PDF export of treatment plan reports. Treatment plan reports include all patient, plan, and beam data and can optionally include screen shots taken in the application.

## **Report Customization**

Fix Me!

The ElectronRT App provides options for customizing the exported plan report including: customizing the header logo and setting the different options for details that will appear on the report.

### Header Logo

By default the header logo is set to the logo of the application. The header logo can be optionally overridden by the user in the Organization Configuration block. For more information please see <link to

site config wiki>

-	(TROP										
Sent: Anon A8	9376										
ini Pana	-										
decim	al 🖬	ат	Delauit Ap	ap Logo							
decimal I	Electr	onR	г								
Version 0.0.3											
Treatment	t Plan P	tepor	t								
Patient											
Herne: .decimal 1D:	Anon Al Kostej		Hills: Patient ID:	A89376 1	Birth i Sec.	Date: 158 CEN	3-Jan-01 H				
Course											
Course Name Course 10: Physician:	1	ang Physi	Trea	itment Sta		y te PTV in 3 I and Neck	2 Fadiens				
DICOM Info											
Structure Set Patient Posit		POLANDR NPS	01 Struct	ture Set La	bel PL	9612					
Plan											
Plan Name: Plan Descript		n 1 - Pi	an 191 1								
Imaging											
CT Curve:	GE 120										
Beams											
Hacking Hod Coordinate S		tarian Tre Equipmen		st Modified	By: Alfre	do Negron-R	Ivera On: 2038-86-34	13:37:21)			
Beam List											
10	CL0; 6x6	Tanget				Collimator 0 deg	Taocenter (cm)	Entrance (cm) -0.35, -34.45, 7.50	188 cm	Applicator	
b1 : 6355 C0											

#### **Report Content**

By default plan reports will contain all plan information currently present in the treatment plan. Users can optionally chose to not export specific content to the treatment plan report including: dose reference points, density overrides, beams, or ordered hardware information.

### Coordinate System

By default the treatment plan report will export beam geometry information in the equipment coordinate system. Users can optionally chose to export beam coordinates using the IEC coordinate system as specified in the Machine Configuration. For more information please see <link to site config wiki>



Fix Me!

From: http://apps.dotdecimal.com/ - decimal App Documentation

Permanent link: http://apps.dotdecimal.com/doku.php?id=electronrt:userguide:tutorials:plan\_reports&rev=159525910

Last update: 2021/07/29 18:24

