# **Plan Reports**

The ElectronRT App allows PDF export of treatment plan reports. Treatment plan reports include all patient, plan, and beam data and can optionally include screen shots taken in the application.

## **Report Customization**

Fix Me!

The ElectronRT App provides options for customizing the exported plan report including: customizing the header logo and setting the different options for details that will appear on the report.

### Header Logo

By default the header logo is set to the logo of the application. The header logo can be optionally overridden by the user in the Organization Configuration block. For more information please see <link to

site config wiki>

-garaator i	arne>										
Sent: Anon A	19376										
decim	al	ат	Detault Ap	pp Logo							
decimal	Electr	onR	т								
lersion 0.0.3											
Treatmen	t Plan	Repor	t								
Patient											
Here: decimal 1D		89376 I	Hits: Patient ID:	A#9376	Birth i Beau	Pater 198 Oth	3-Jan-Bi er				
Course											
Course Nam Course 10: Physician	1	a JEDD-0	Trea	scription stmeet Site		y te PTV in 3 I and Neck	0 fadiens				
DICOM Info	)										
Structure 5 Patient Pes		POLANDA NPS	101 <b>Struc</b>	ture Set La	bel PL/	9612					
Plan											
Plan Name: Plan Descri		01 P	ten 201 1								
Imaging											
CT Curve:	GE 128										
Beams											
Hachine Ho Coordinate		Varian'Tr Equipme		st Nodified	By: Alfre	do Negron-R	Ivera On: 2028-86-24	13(37(21)			
Beam List											
10 b1 : 6356 C	0 CL0: 6x6	Tange	9 MeV			Collimator 0 deg	Taocenter (cm) -0.35, -34.45, 7.50	Entrance (cm) -0.35, -34.45, 7.50	100 cm	Applicator	

#### **Report Content**

By default plan reports will contain all plan information currently present in the treatment plan. Users can optionally chose to not export specific content to the treatment plan report including: dose reference points, density overrides, beams, or ordered hardware information.

#### **Coordinate System (Equipment & IEC)**

By default the treatment plan report will export beam geometry information in the equipment coordinate system. Users can optionally chose to export beam coordinates using the IEC coordinate system as specified in the Machine Configuration. This option is provided as a checkbox in the Report Content Options section.

For more information on setting the IEC coordinate systems please see <link to site config wiki>



From: https://apps.dotdecimal.com/ - decimal App Documentation

Permanent link: https://apps.dotdecimal.com/doku.php?id=electronrt:userguide:tutorials:plan\_reports&rev=1595259172

Last update: 2021/07/29 18:24