

# Creating a Range Compensator

NOTE: Range compensators can only be added to SOBPs beams. A range compensator can be added for any snout that has range compensator information defined for use in the site specific machine model. The site model also includes the maximum and minimum possible thickness values, the material, and the extents of the snout's range compensator.

From:

<https://apps.dotdecimal.com/> - **decimal App Documentation**

Permanent link:

[https://apps.dotdecimal.com/doku.php?id=planning:userguide:tutorials:range\\_compensators&rev=1564491288](https://apps.dotdecimal.com/doku.php?id=planning:userguide:tutorials:range_compensators&rev=1564491288)

Last update: **2021/07/29 18:25**